


Instructions for Westfalia Cooker Unit.

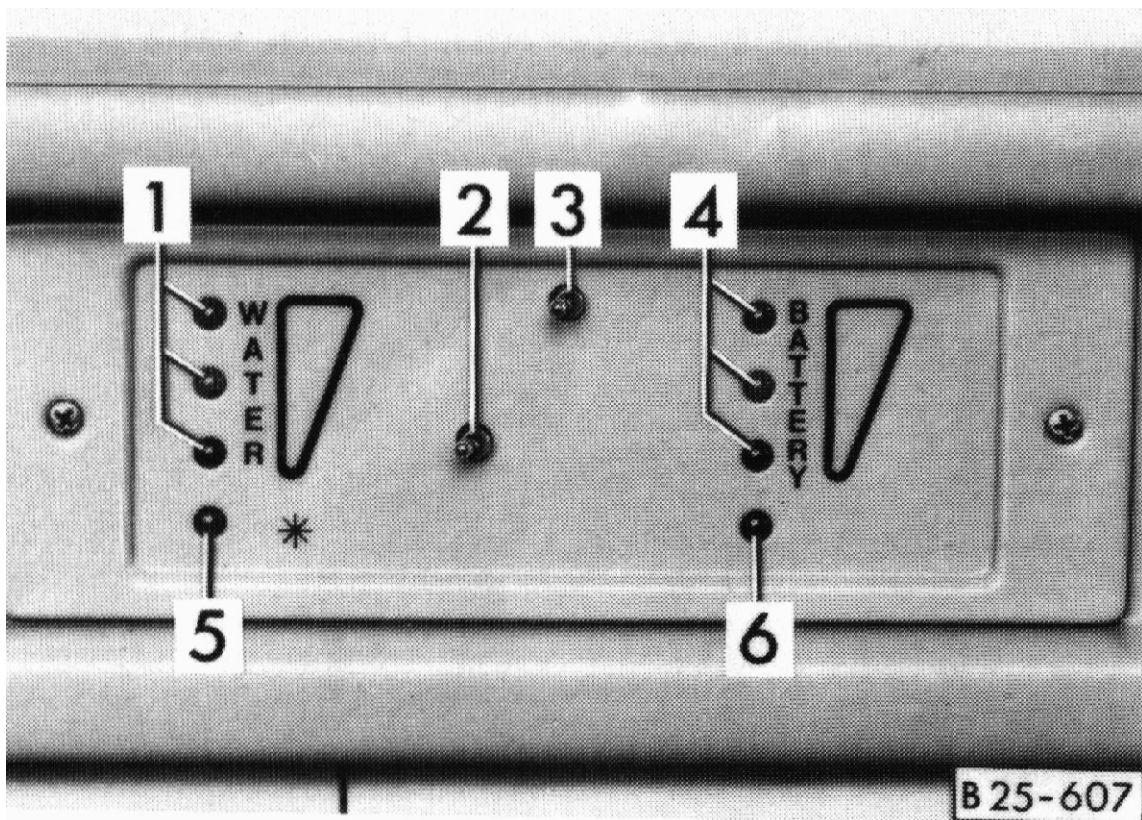

In the cooker unit is the control board with the following operations and control functions.

1 - Indicator lights for level of fill of water in the fresh water tank.. The capacity of the freshwater tank is 55l.

- Red - 0l to 10l of water in the tank
- Yellow - 10l to 40l of water in the tank
- Green - 40l to 55l of water in the tank

2 - Switch for "ice ex" or De-Icer

3 - Switch for the indicator lights for water level, battery charge and gas operation of the refrigerator.

4 - Indicator lights for the charge of the battery.

- Green - more than 12.5v
- Yellow - less than 12.5v
- Red - less than 12v

5 - Control lights for gas operation of the refrigerator.

6 - Control lights for "ice ex"(De-Icer)

"ice ex" is a heating element,

It protects the gas system from freezing when outside temperatures are under +5°C. It must be switched on 15 minutes before use of gas.

The ice ex is switched on at the control board on the cooker unit.

The green indicator light shows it is switched on.